



# Expansion Fan

## Introduction

Some of the main characteristics of supersonic flows are shock waves and expansion fans. Oblique shock waves take place when a supersonic flow is turned into itself (the area is reduced; see Figure 1), decreasing its Mach number. In Figure 1, the streamlines are deflected upward so that the flow behind the shock is uniform and parallel to the surface. The shock is very thin, which leads to very large gradients of velocity and temperature inside the shock. Hence, a shock wave is a dissipative and irreversible process that generates entropy and decreases the total values of pressure and density. However, total temperature is conserved and the static temperature, pressure, and density increase. Note that “total values” refer to the values that the properties of the flow would achieve when brought to stagnation, and “static values” refer to the actual values of the properties evaluated at a certain speed. A special case of oblique shocks is a normal shock, which is perpendicular to the flow direction.

An expansion fan is formed when supersonic flow is turned away from itself (the area is increased; see Figure 1). The direction of the flow changes smoothly and continuously across an expansion wave until it is uniform and parallel to the adjacent surface. Hence entropy is conserved and total conditions do not vary across the wave. The Mach number increases and the static temperature, pressure, and density decrease across the expansion wave.

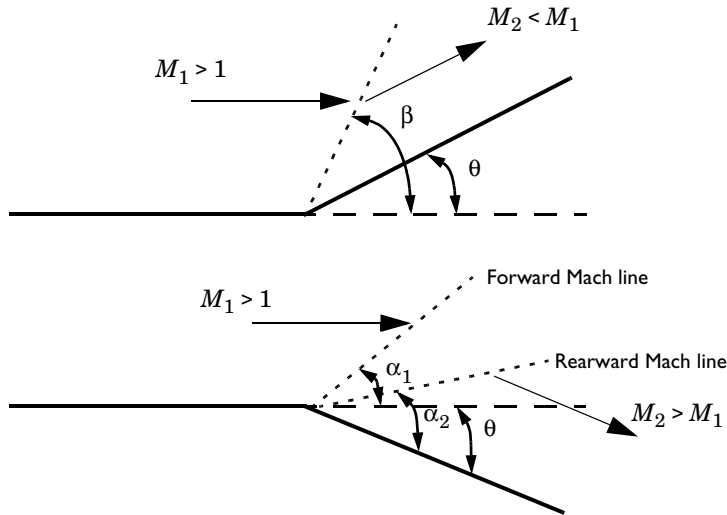
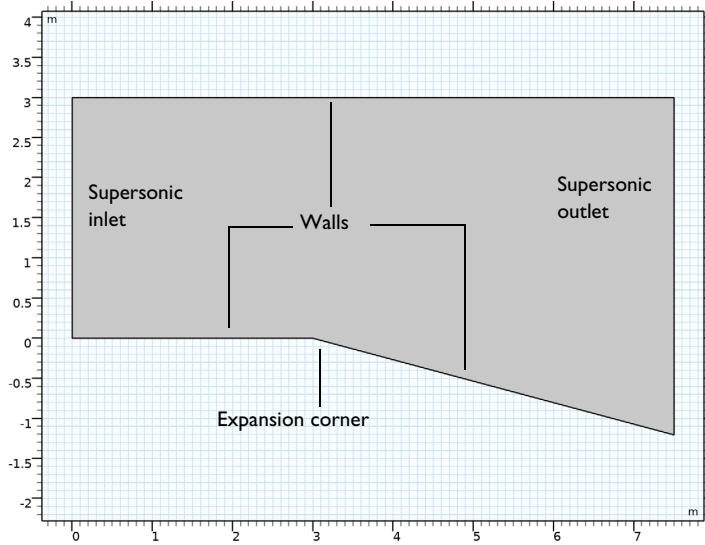


Figure 1: Oblique shock wave (up) and Prandtl-Meyer expansion fan (down).

This application models an expansion fan at a  $15^\circ$  expansion corner. The inlet flow is supersonic with Mach number 2.5. The flow is assumed to be inviscid and the results are compared with inviscid compressible flow theory. For details about this theory and its implementation in the CFD Module, see the documentation for the model [3D Supersonic Flow in a Channel with a Bump](#).

### *Model Definition*

The problem is governed by the inviscid compressible flow equations which are modeled by The High Mach Number Flow, Laminar interface in the CFD module in COMSOL Multiphysics. The geometry of the model is depicted in [Figure 2](#).



*Figure 2: Model geometry.*

Because the flow is assumed to be inviscid, a slip boundary condition is applied at the walls. The inlet flow is supersonic and defined by the free-stream total conditions

$$M = 2.5$$

$$P_0 = 12 \text{ psi}$$

$$T_0 = 550 \text{ K}$$

The flow is assumed to be supersonic at the outlet.

The fluid is air with a specific gas constant of 287 J/(kg·K) and a ratio of specific heats of 1.4. The dynamic viscosity and the thermal conductivity are set to zero.

#### ANALYTICAL SOLUTION

The forward Mach line (Figure 1) is defined by the inlet Mach angle (see Ref. 1)

$$\alpha_1 = \text{asin} \frac{1}{M_1} \quad (1)$$

The Mach number after the expansion fan can be obtained from the relation

$$\theta = v(M_2) - v(M_1)$$

where  $v(M)$  is the Prandtl-Meyer function

$$v(M) = \sqrt{\frac{\gamma+1}{\gamma-1}} \text{atan} \left( \sqrt{\frac{\gamma-1}{\gamma+1}} (M^2 - 1) \right) - \text{atan}(\sqrt{M^2 - 1})$$

Once  $M_2$  is known, the rearward Mach angle is obtained as

$$\alpha_2 = \text{asin} \frac{1}{M_2}$$

The expansion fan is an isentropic process, which produces a continuous and smooth change in the flow. Hence, the total properties are conserved.

#### Results and Discussion

The distributions of pressure, temperature, and Mach number are depicted in Figure 3 through Figure 5. The flow past the corner is expanded in a succession of infinitesimal waves (Mach waves), decreasing the static pressure and temperature while increasing the Mach number. The streamlines smoothly change their direction across the expansion fan until they are parallel to the surface below.

The Mach number and total properties after the fan are listed in Table 1. The Mach number obtained agrees well with inviscid flow theory, and the total properties of the flow are conserved.

TABLE 1: COMPARISON OF RESULTS.

	MODEL	COMPRESSIBLE FLOW THEORY
Mach number	3.235	3.234
Total temperature	305.4 K	305.5 K

TABLE I: COMPARISON OF RESULTS.

	MODEL	COMPRESSIBLE FLOW THEORY
Total pressure	82.5 kPa	82.7 kPa
Total density	0.941 kg/m <sup>3</sup>	0.943 kg·s

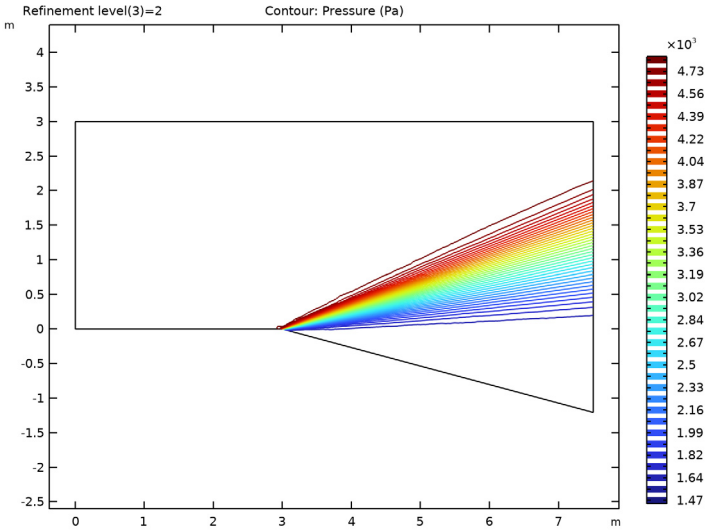


Figure 3: Pressure contours and streamlines.

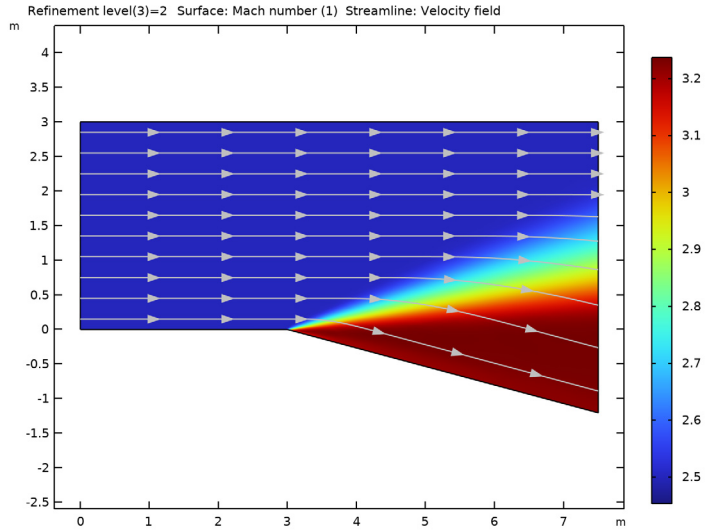


Figure 4: Mach number.

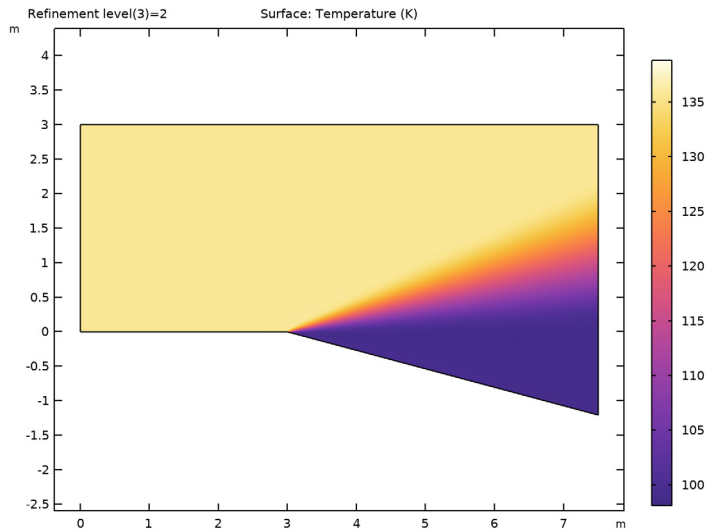
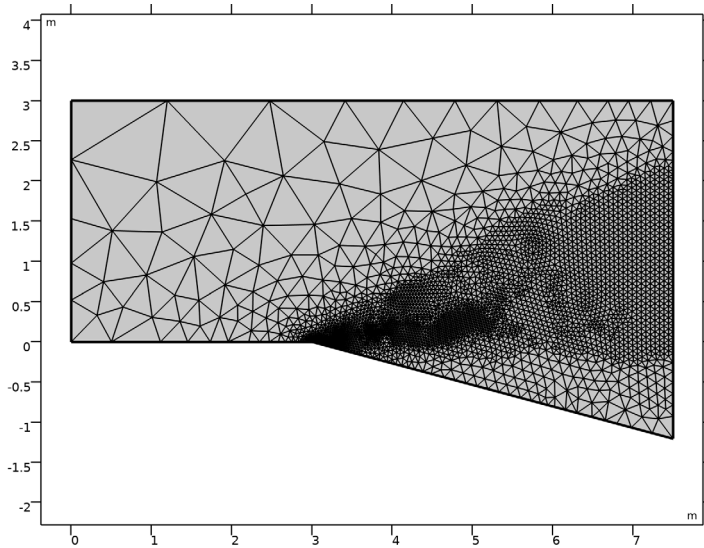


Figure 5: Temperature contours.

## Notes About the COMSOL Implementation

---

In this model, convergence can be improved using simple tricks. First of all, we have rounded the corner to avoid discontinuities and sharp gradients. Moreover, the adaptive mesh refinement feature is used to refine the mesh at the expansion fan where the gradients are large; see [Figure 6](#).



*Figure 6: Adapted mesh. The mesh resolves the expansion fan more finely than the rest of the modeling domain.*

## Reference

---

1. J. D. Anderson, Jr., *Modern Compressible Flow*, McGraw-Hill, 2<sup>nd</sup> Edition, Singapore 1990.

---

**Application Library path:** CFD\_Module/High\_Mach\_Number\_Flow/expansion\_fan


---

## Modeling Instructions




---

From the **File** menu, choose **New**.

## NEW

In the **New** window, click  **Model Wizard**.

## MODEL WIZARD

- 1 In the **Model Wizard** window, click  **2D**.
- 2 In the **Select Physics** tree, select **Fluid Flow>High Mach Number Flow>High Mach Number Flow, Laminar (hmnf)**.
- 3 Click **Add**.
- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **General Studies>Stationary**.
- 6 Click  **Done**.

## GLOBAL DEFINITIONS

### *Parameters I*


- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters I**.
- 2 In the **Settings** window for **Parameters**, locate the **Parameters** section.
- 3 In the table, enter the following settings:

Name	Expression	Value	Description
M1	2.5	2.5	Mach number, inlet
pin_tot	12[psi]	82737 Pa	Total pressure, inlet
Tin_tot	550[R]	305.56 K	Total temperature, inlet
Rs	287[J/kg/K]	287 J/(kg·K)	Specific gas constant
gamma	1.4[1]	1.4	Ratio of specific heats
L_in	3[m]	3 m	Length, inlet
L_wave	4.5[m]	4.5 m	Length after the corner
ht	L_in	3 m	Channel height
R_fillet	0.1[m]	0.1 m	Radius, rounded corner




Name	Expression	Value	Description
theta	15[deg]	0.2618 rad	Flow-deflection angle
u_in	$M1 \cdot \sqrt{\gamma \cdot R_s \cdot T_{in\_tot} / (1 + 0.5 \cdot M1^2 \cdot (-1 + \gamma)) + \epsilon_s}$	583.98 m/s	Velocity, inlet

## GEOMETRY I

In the **Geometry** toolbar, click  **Sketch**.

*Polygon 1 (pol1)*

**1** In the **Geometry** toolbar, click  **Polygon**.

**2** In the **Settings** window for **Polygon**, locate the **Coordinates** section.

**3** From the **Data source** list, choose **Vectors**.

**4** In the **x** text field, type 0, L\_in, L\_in, L\_in+L\_wave, L\_in+L\_wave, L\_in+L\_wave, L\_in+L\_wave, 0, 0, 0.


**5** In the **y** text field, type 0, 0, 0, -L\_wave\*tan(theta), -L\_wave\*tan(theta), ht, ht, ht, ht, 0.



*Fillet 1 (fil1)*

**1** In the **Geometry** toolbar, click  **Fillet**.

- 2 On the object **poll**, select Point 3 only (expansion corner).

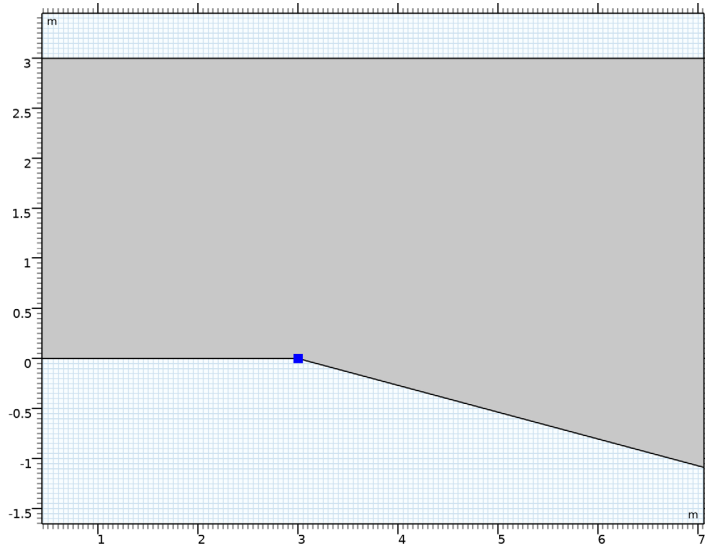It might be easier to select the correct point by using the **Selection List** window. To open this window, in the **Home** toolbar click **Windows** and choose **Selection List**. (If you are running the cross-platform desktop, you find **Windows** in the main menu).



- 3 In the **Settings** window for **Fillet**, locate the **Radius** section.
- 4 In the **Radius** text field, type `R_fillet`.
- 5 Click  **Build All Objects**.
- 6 Click the  **Zoom Extents** button in the **Graphics** toolbar (see [Figure 2](#))

## DEFINITIONS

### *Variables 1*

- 1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Definitions** and choose **Variables**.
- 2 In the **Settings** window for **Variables**, locate the **Variables** section.

3 In the table, enter the following settings:

Name	Expression	Unit	Description
v1	$\sqrt{(\gamma+1)/(\gamma-1)} * \operatorname{atan}(\sqrt{(\gamma-1)*(M_1^2-1)/(\gamma+1)}) - \operatorname{atan}(\sqrt{M_1^2-1})$	rad	Prandtl-Meyer function, inlet
vi2	$\sqrt{(\gamma+1)/(\gamma-1)} * \operatorname{atan}(\sqrt{(\gamma-1)*(M_2^2-1)/(\gamma+1)}) - \operatorname{atan}(\sqrt{M_2^2-1})$		Guess for Prandtl-Meyer function after expansion fan
v2	theta+v1	rad	Residual for global equation
Tin_stat	$T_{in\_tot}/(1+0.5*M_1^2*(-1+\gamma))$	K	Static temperature, inlet
pin_stat	$p_{in\_tot}/(1+0.5*M_1^2*(-1+\gamma))^{\gamma/(-1+\gamma)}$	Pa	Static pressure, inlet

The defined variables are used to compute the analytical Mach number and the static conditions at the inlet.  $M_2$  will be defined later.

## HIGH MACH NUMBER FLOW, LAMINAR (HMNF)

### Fluid 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)>High Mach Number Flow, Laminar (hmnf)** click **Fluid 1**.
- 2 In the **Settings** window for **Fluid**, locate the **Heat Conduction** section.
- 3 From the  $k$  list, choose **User defined**. In the associated text field, type  $1e-8$ .
- 4 Locate the **Thermodynamics** section. From the  $R_g$  list, choose **User defined**. In the associated text field, type  $R_s$ .
- 5 From the **Specify Cp or  $\gamma$**  list, choose **Ratio of specific heats**.
- 6 From the  $\gamma$  list, choose **User defined**. In the associated text field, type  $\gamma$ .

- 7 Locate the **Dynamic Viscosity** section. From the  $\mu$  list, choose **User defined**. In the associated text field, type  $1\text{e-}8$ .

The dynamic viscosity and thermal conductivity are set to small values to mimic an inviscid and nonconducting fluid.

#### Wall 1

- 1 In the **Model Builder** window, click **Wall 1**.
- 2 In the **Settings** window for **Wall**, locate the **Boundary Condition** section.
- 3 From the **Wall condition** list, choose **Slip**.  
Slip walls are used for the inviscid case.


#### Initial Values 1

- 1 In the **Model Builder** window, click **Initial Values 1**.
- 2 In the **Settings** window for **Initial Values**, locate the **Initial Values** section.
- 3 Specify the **u** vector as


u_in	x
0	y


- 4 In the  $p$  text field, type  $p_{in\_stat}$ .
- 5 In the  $T$  text field, type  $T_{in\_stat}$ .

#### Inlet 1


- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Inlet**.
- 2 Select Boundary 1 only (see the supersonic inlet in [Figure 2](#))
- 3 In the **Settings** window for **Inlet**, locate the **Flow Condition** section.
- 4 From the **Flow condition** list, choose **Supersonic**.
- 5 Locate the **Flow Properties** section. From the **Input state** list, choose **Total**.
- 6 In the  $p_{0,tot}$  text field, type  $p_{in\_tot}$ .
- 7 In the  $T_{0,tot}$  text field, type  $T_{in\_tot}$ .
- 8 In the  $Ma_0$  text field, type  $M1$ .

#### Outlet 1

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Outlet**.
- 2 Select Boundary 5 only (see the supersonic outlet in [Figure 2](#))
- 3 In the **Settings** window for **Outlet**, locate the **Flow Condition** section.

- 4 From the **Flow condition** list, choose **Supersonic**.  
Add a global equation to find the analytical Mach number after the expansion fan.
- 5 Click the  **Show More Options** button in the **Model Builder** toolbar.
- 6 In the **Show More Options** dialog box, in the tree, select the check box for the node **Physics>Equation-Based Contributions**.
- 7 Click **OK**.

*Global Equations 1*

- 1 In the **Physics** toolbar, click  **Global** and choose **Global Equations**.
- 2 In the **Settings** window for **Global Equations**, locate the **Global Equations** section.
- 3 In the table, enter the following settings:

Name	f(u,ut,utt,t) (1)	Initial value (u_0) (1)	Initial value (u_t0) (1/s)	Description
M2	v2-vi2	M1	0	Mach flow after the expansion fan, analytical solution

**MESH 1**



In the **Model Builder** window, under **Component 1 (comp1)** right-click **Mesh 1** and choose **Build All**.

**STUDY 1**

*Step 1: Stationary*


- 1 In the **Model Builder** window, under **Study 1** click **Step 1: Stationary**.
- 2 In the **Settings** window for **Stationary**, click to expand the **Adaptation and Error Estimates** section.
- 3 From the **Adaptation and error estimates** list, choose **Adaptation and error estimates**.

*Solution 1 (sol1)*



- 1 In the **Study** toolbar, click  **Show Default Solver**.
- 2 In the **Model Builder** window, expand the **Solution 1 (sol1)** node, then click **Stationary Solver 1**.
- 3 In the **Settings** window for **Stationary Solver**, locate the **General** section.
- 4 In the **Relative tolerance** text field, type 1e-5.
- 5 Click  **Compute**.

## RESULTS

### Velocity (hmnf)


In the **Study** toolbar, click  **Compute**.

### Streamline I


- 1 In the **Model Builder** window, right-click **Mach Number (hmnf)** and choose **Streamline**.
- 2 Select Boundary 1 only.
- 3 In the **Settings** window for **Streamline**, locate the **Streamline Positioning** section.
- 4 In the **Number** text field, type 10.
- 5 Locate the **Coloring and Style** section. Find the **Point style** subsection. From the **Type** list, choose **Arrow**.
- 6 From the **Arrow distribution** list, choose **Equal time**.
- 7 Select the **Scale factor** check box. In the associated text field, type  $1e-3$ .
- 8 From the **Color** list, choose **Gray**.
- 9 In the **Mach Number (hmnf)** toolbar, click  **Plot**.
- 10 Click the  **Zoom Extents** button in the **Graphics** toolbar (see [Figure 4](#))

The last step is to compute the Mach number and total values after the expansion fan.

### Cut Point 2D I

- 1 In the **Results** toolbar, click  **Cut Point 2D**.
- 2 In the **Settings** window for **Cut Point 2D**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Study 1/Adaptive Mesh Refinement Solutions 1 (sol2)**.
- 4 Locate the **Point Data** section. In the **x** text field, type  $L_{in} + L_{wave}$ .
- 5 In the **y** text field, type  $-L_{wave} \cdot \tan(\theta) / 2$ .

### Mach number

- 1 In the **Results** toolbar, click  **Point Evaluation**.
- 2 In the **Settings** window for **Point Evaluation**, type Mach number in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Cut Point 2D I**.
- 4 From the **Parameter selection (Refinement level)** list, choose **Last**.
- 5 Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
hmnf.Ma	1	Mach number

- 6 Click  **Evaluate**.

Evaluation points 2-5

Proceed to create evaluation points used to compute the total values of temperature, pressure, and density behind the expansion fan, and the analytical Mach number:

Label	Dataset	Expression
Total pressure	Cut Point 2D 1	$p*(1+0.5*hmnf.Ma^2*(-1+\gamma))^{\gamma/(-1+\gamma)}$
Total temperature	Cut Point 2D 1	$T*(1+0.5*hmnf.Ma^2*(-1+\gamma))$
Total density	Cut Point 2D 1	$hmnf.rho*(1+0.5*hmnf.Ma^2*(-1+\gamma))^{1/(-1+\gamma)}$
Mach number, analytical solution	Cut Point 2D 1	M2

